

## Installation Instructions – Ferrules

### Required for Installation:

Electric drill, ¼" (6mm) drill bit, hammer, shutter fasteners, and Snips.

For use on any uneven surface including: wood, aluminium, vinyl, hardboard, brick, masonry, stone.

### Step 1

Place the shutter next to the window and mark desired location against the wall or window.

### Step 2


To help ensure proper alignment mark and predrill holes using a ¼" (6mm) drill bit into the shutter before attaching it to the wall.

### Step 3

With the shutter in location against the wall, drill through the shutter into the wall 2½" (64mm) deep. Make sure you drill holes deep enough so the shutter fastener doesn't bottom out.

### Step 4

The Ferrule will then be placed behind the shutter and lined up with the holes that have been drilled for the shutter fasteners. Trim the Ferrule to properly fit the gap between the back of the shutter and the wall it is being attached to.

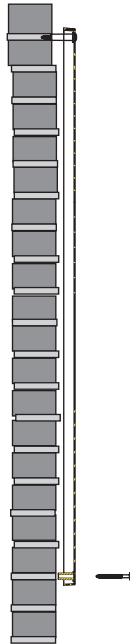

### Step 5

Once the Ferrule is trimmed to the desired length and the shutter is parallel to the wall, insert the shutter fastener into the drilled hole on the shutter and through the Ferrule going into the wall. Tap the shutter fastener gently with a hammer to snug the shutter to the siding. Do not over tighten, or this will cause the shutter to dimple.

